


DV-11 Set-Up Sheet

(Clean beamsplitter with included yellow microfiber cloth)

1

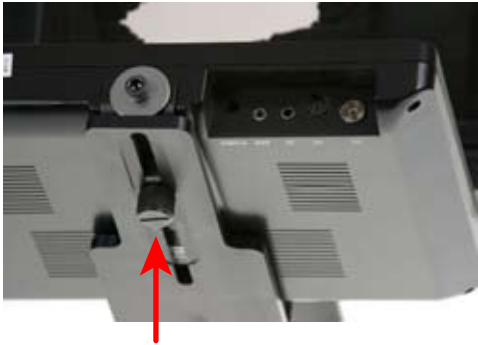

Attach the monitor to the teleprompter sled. Adjust the monitor back and forth until centered.

2

Slide the beamsplitter frame onto the top of the teleprompter sled.



Remove wing nuts before attaching beamsplitter frame.

3



Attach and tighten wingnuts to secure the beamsplitter frame.

4

Slide the beamsplitter into channels in frame. Make sure the velcro is on the bottom edge to cushion the glass.



5

Attach the lens hood onto the beamsplitter frame with the Prompter People label on top. Place lens through the hole and cinch tight to keep light out.



Place camera on riser if the camera is too low in the beamsplitter frame. The lens should be centered in the beamsplitter.

Attach the teleprompter sled to the quick release plate of your camera tripod with the included bolt.

6

To balance the teleprompter, place a pen under the unit with the camera and all parts attached. Move back and forth to find the balance point. Attach your tripod quick release plate at this point.

