


Under Camera Prompter Hardware Assembly & Orientation



Attach mount to your tripod quick release plate




Attach your camera to the top of mount

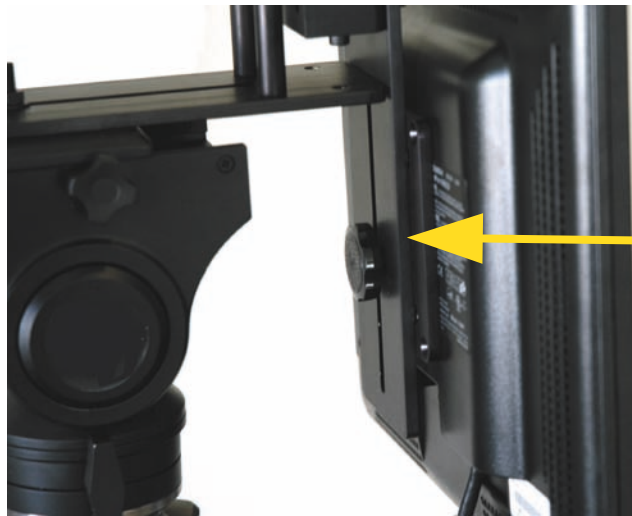

Attach the LCD to the monitor plate

Loosen thumbscrew and slide camera fore/aft so lens extends just past LCD

Tighten thumbscrew to secure

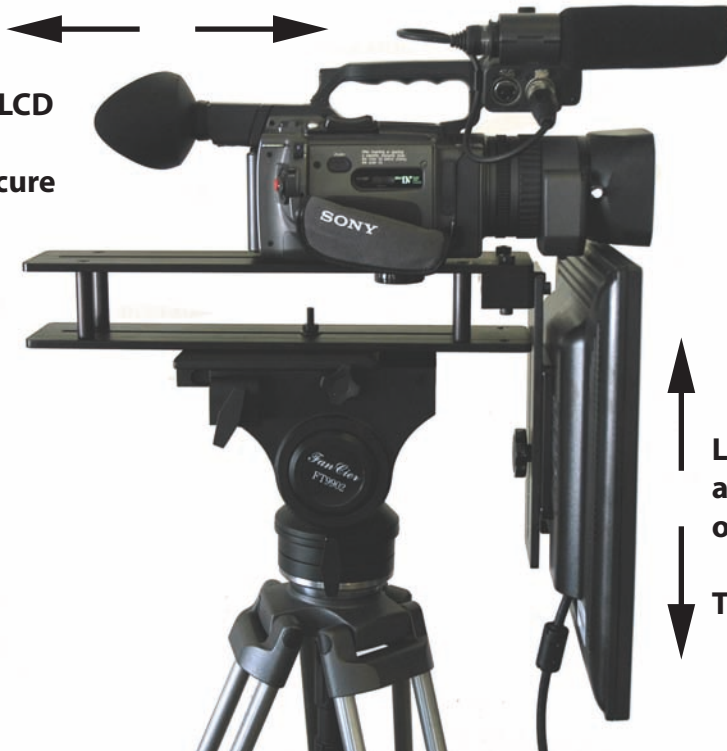

Loosen thumbscrew and slide LCD up to bottom of the camera lens

Tighten thumbscrew to secure